




Icon Coping Type 077

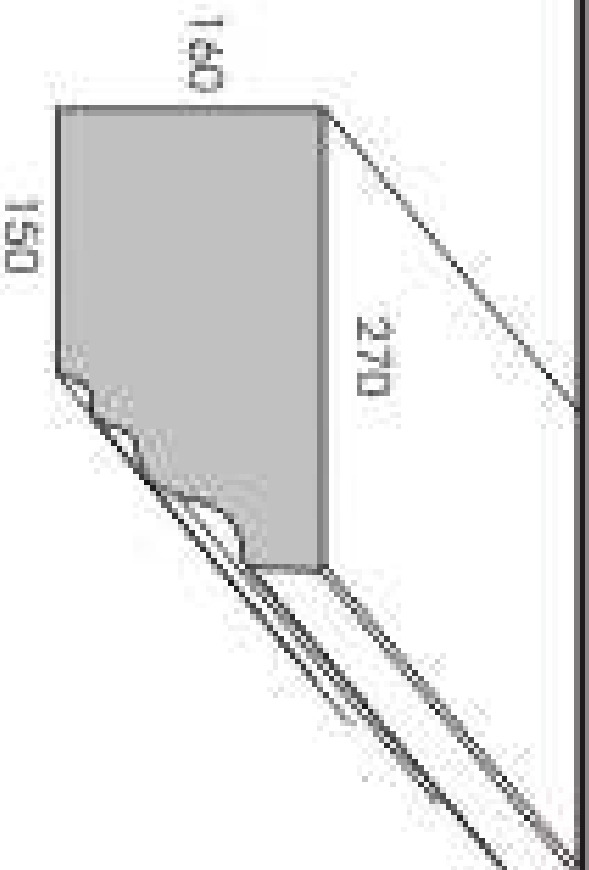


Icon Coping Type 076

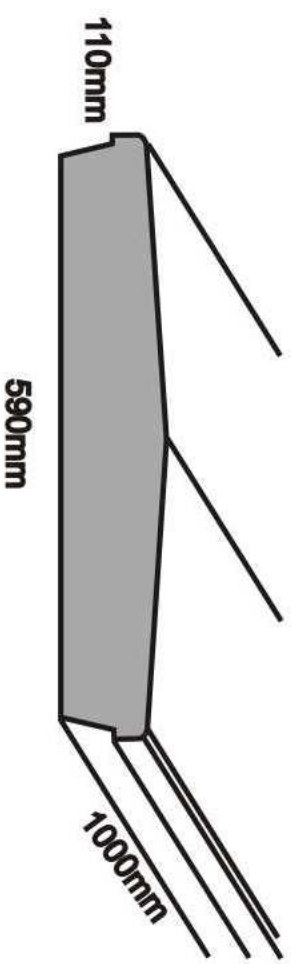


Icon Coping Type 079

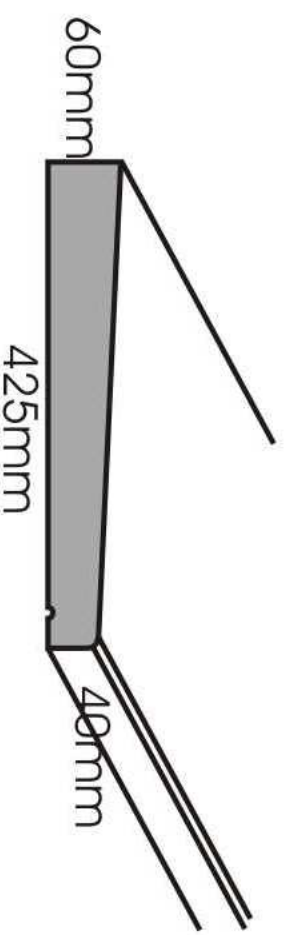


Icon Coping Type 078

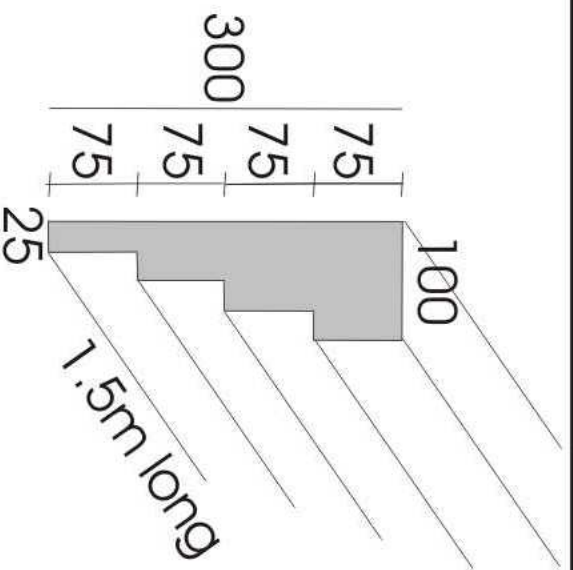


dcon Coping Type 081

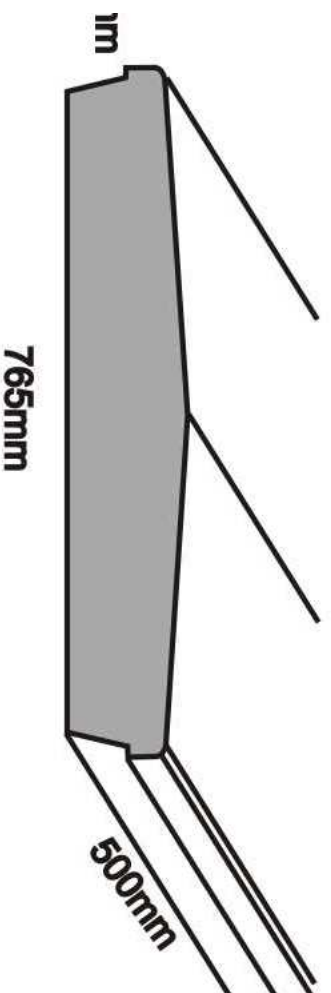


dcon Coping Type 080

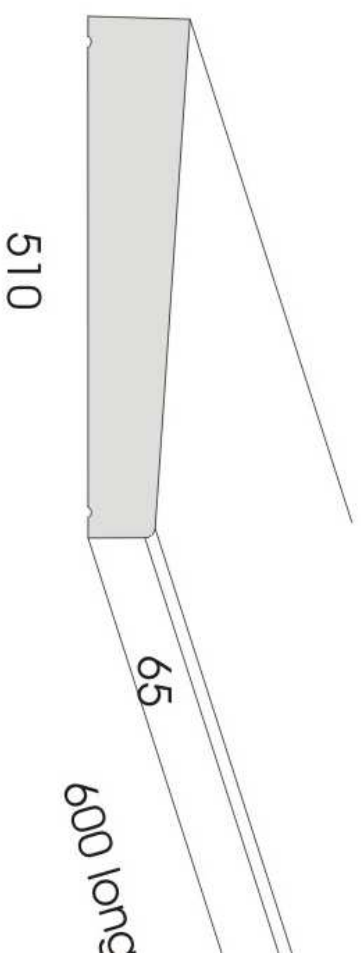


dcon Coping Type 085

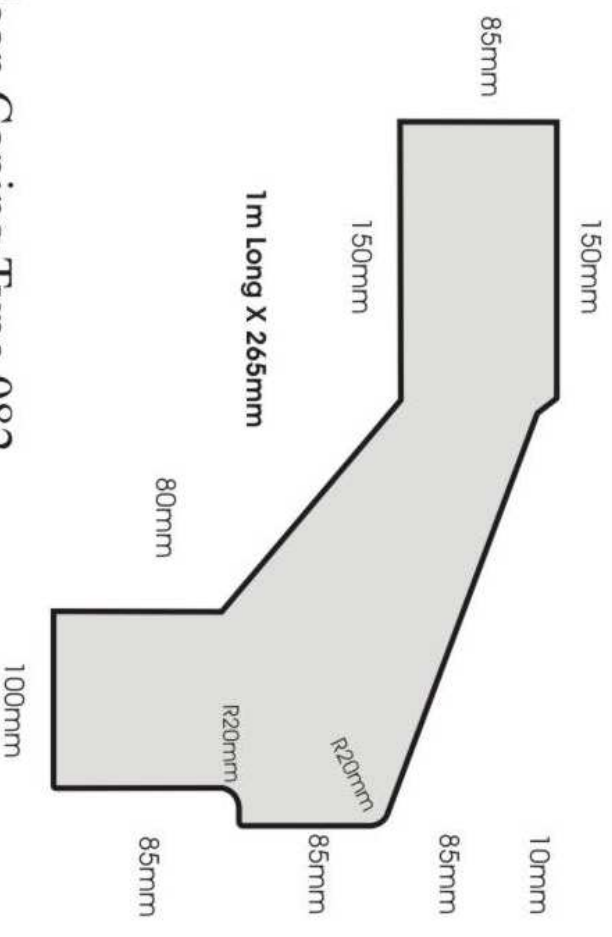


dcon Coping Type 082

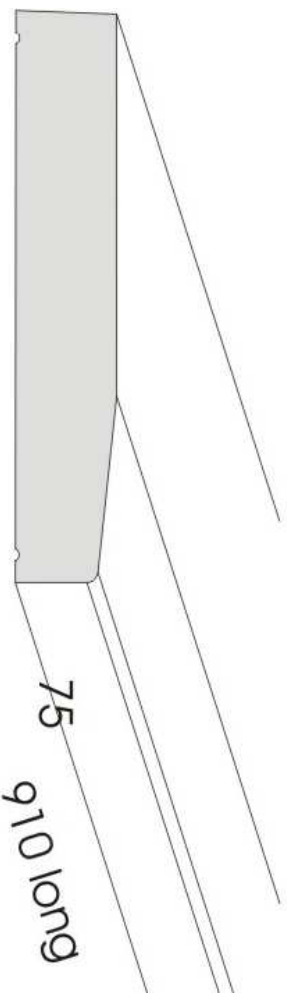


Woodcon Coping Type 087

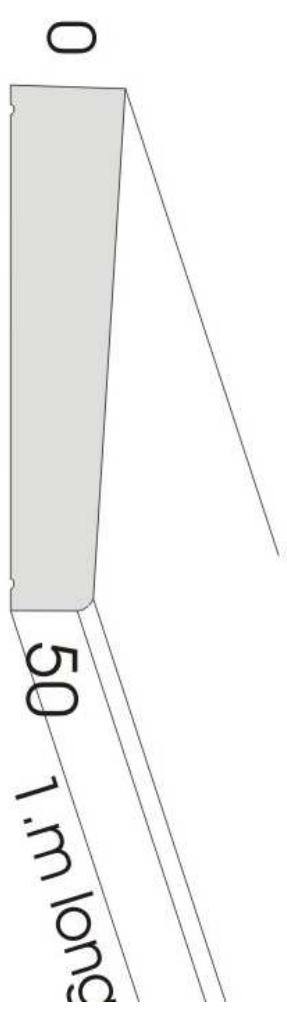


Woodcon Coping Type 089

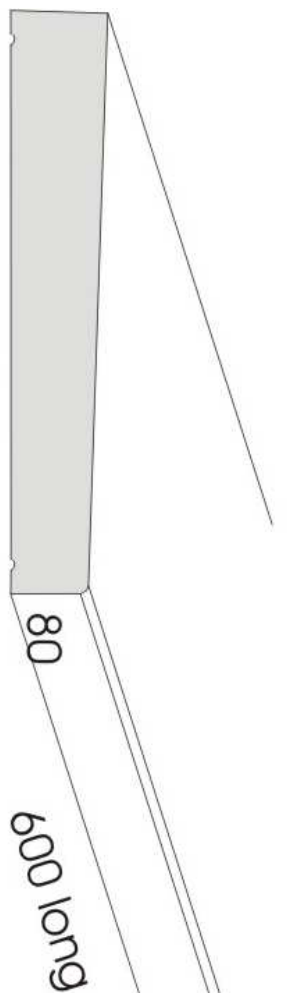


Woodcon Coping Type 086

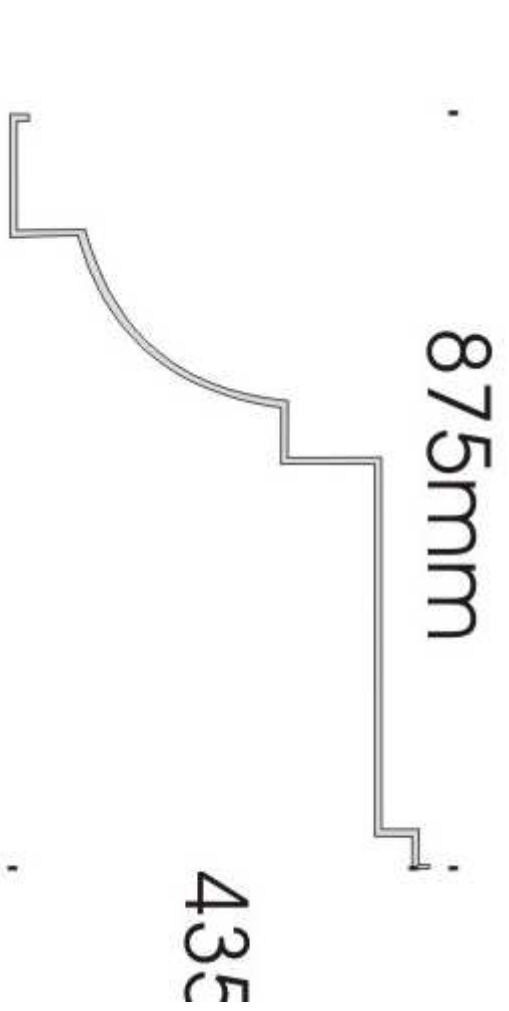


Woodcon Coping Type 088

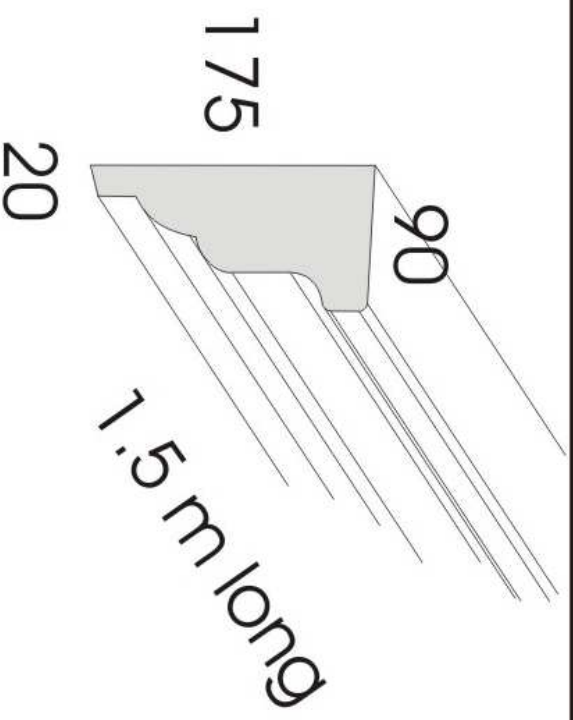


Wooden Coping Type 091

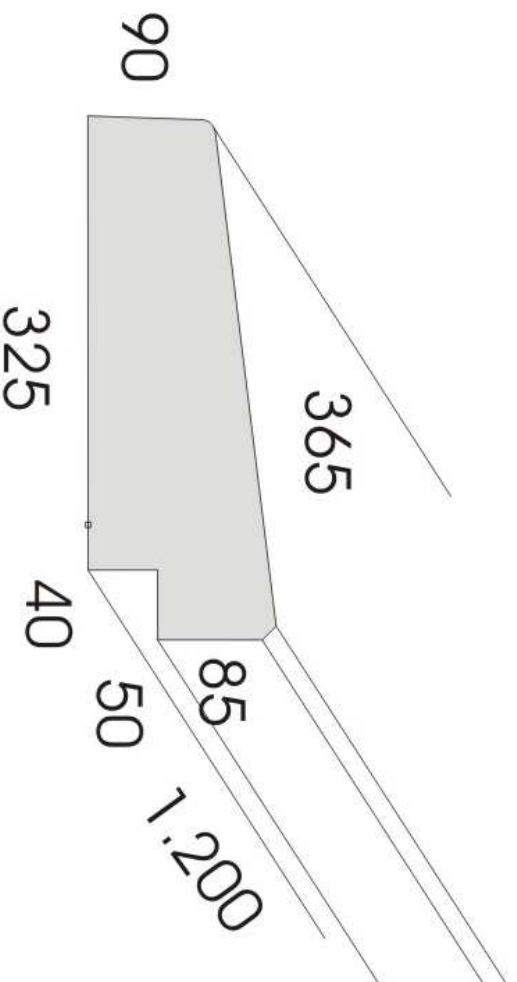


Wooden Coping Type 090

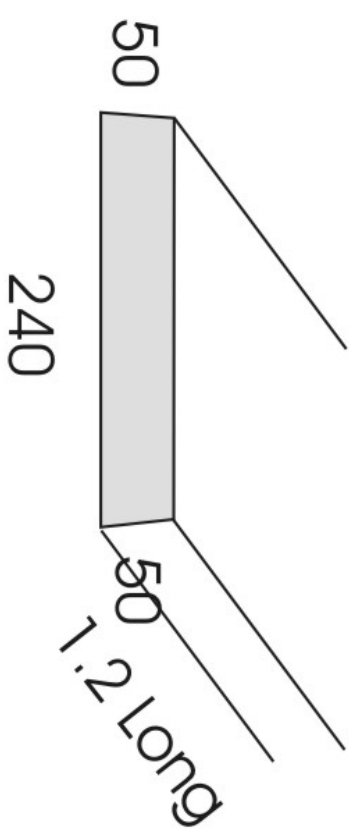


Wooden Coping Type 093

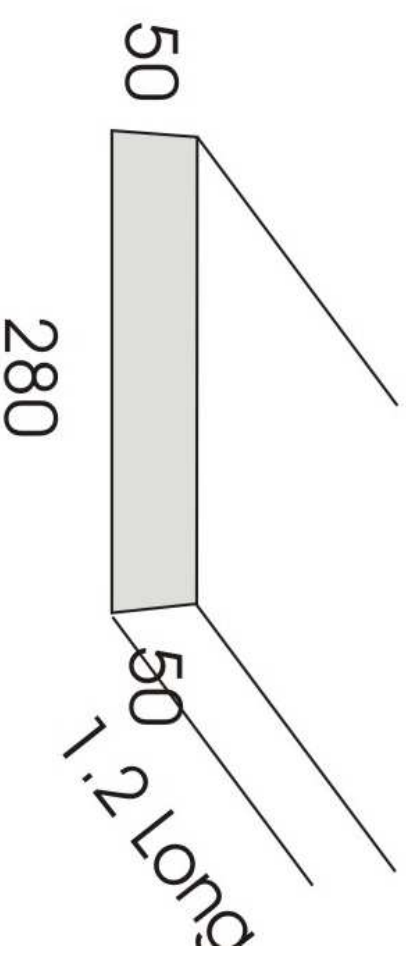


Wooden Coping Type 092

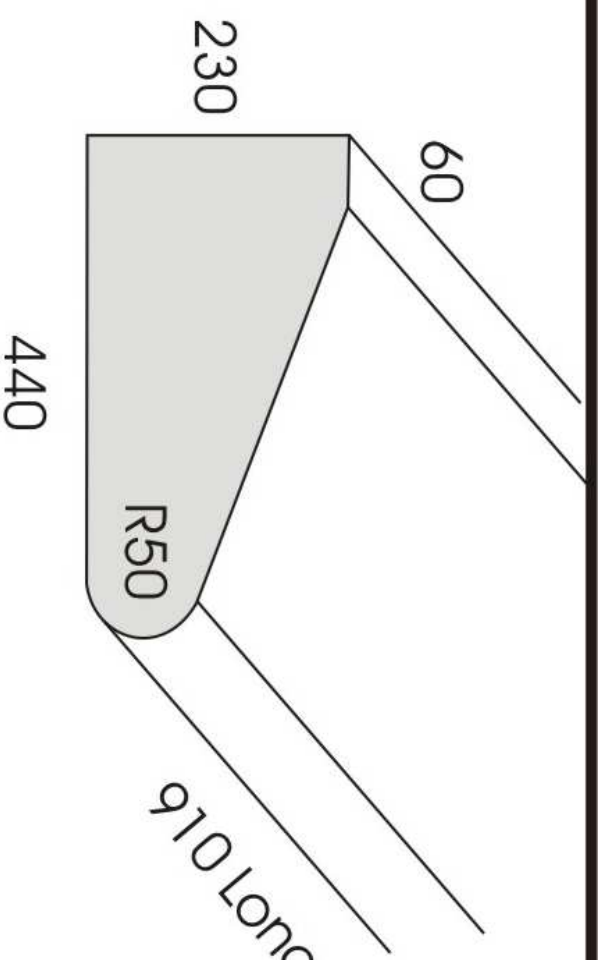


Alcon Coping Type 096

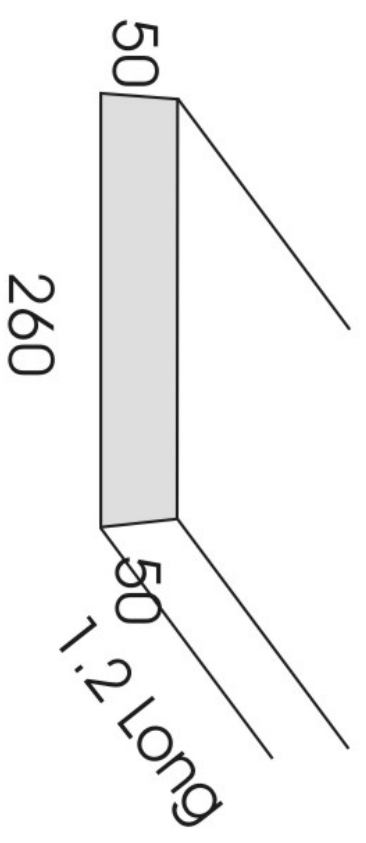


Alcon Coping Type 100

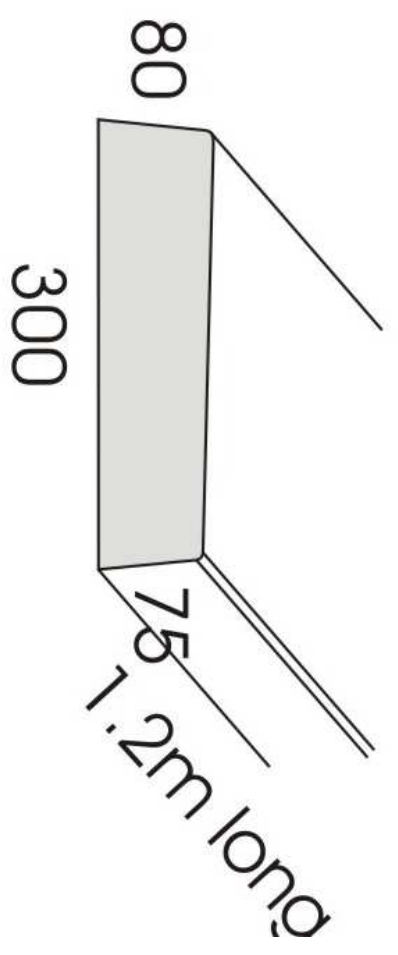


Alcon Coping Type 095

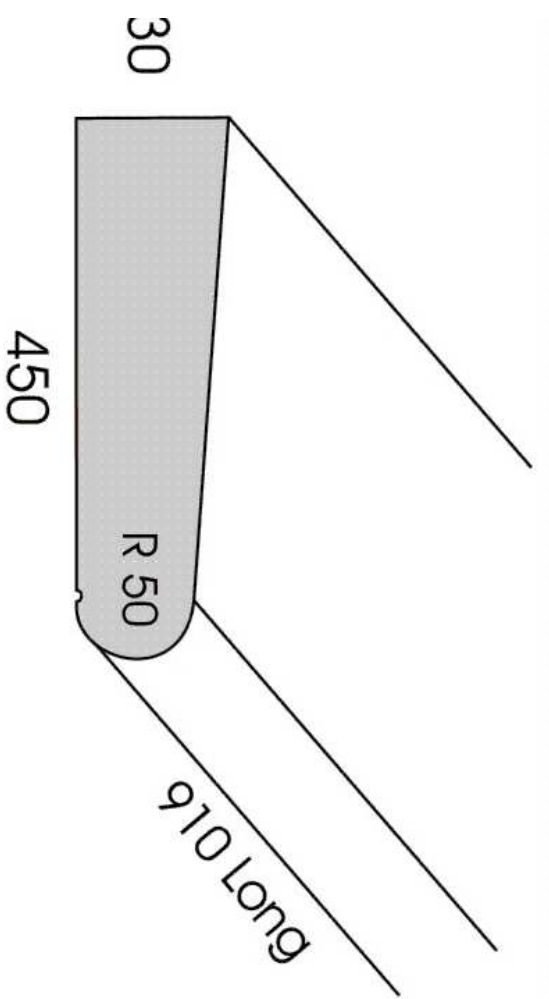


Alcon Coping Type 097

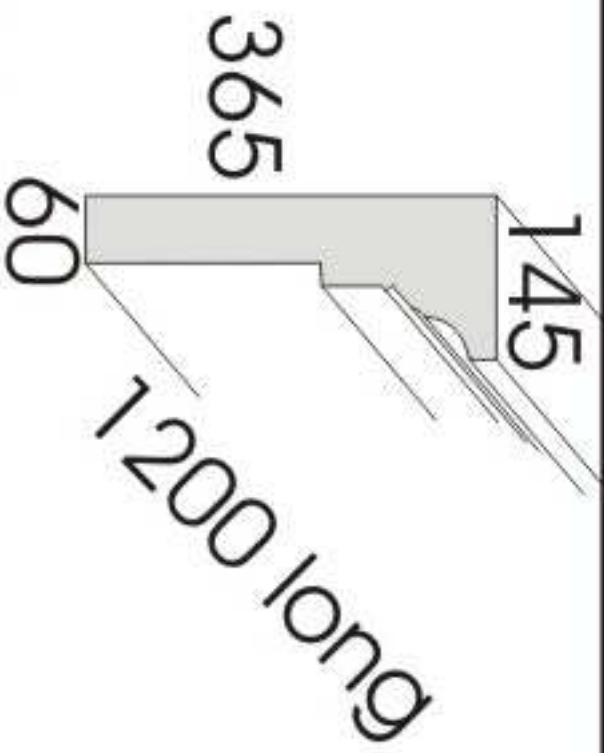


dcon Coping Type 102

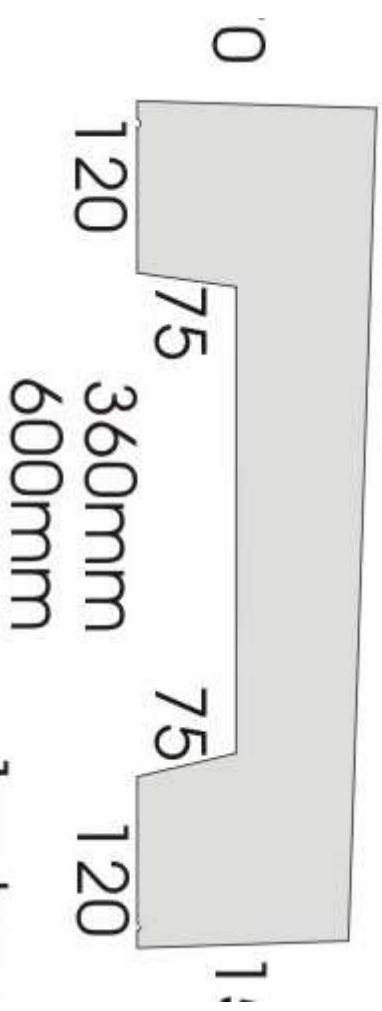

dcon Coping Type 0104

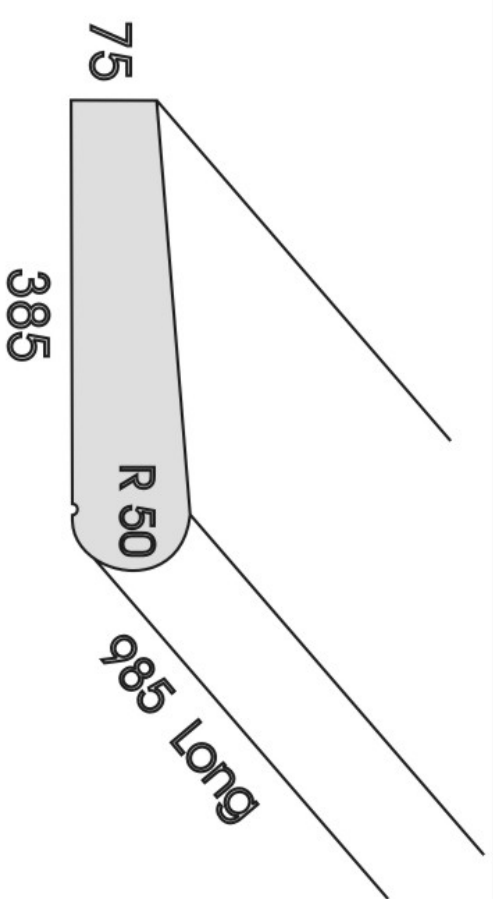


dcon Coping Type 101

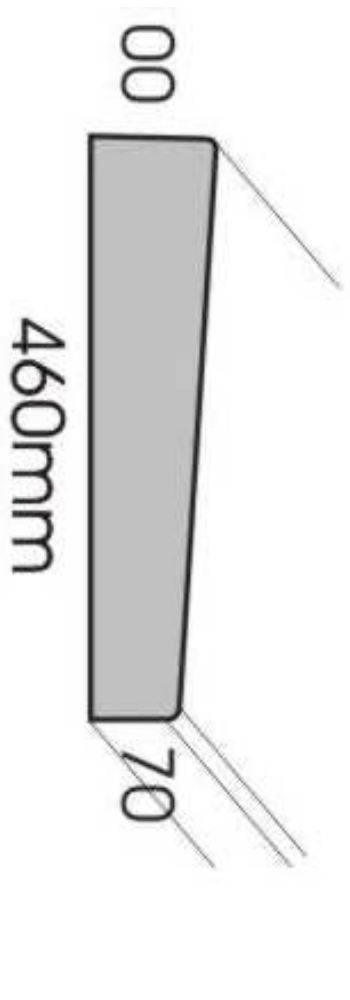


dcon Coping Type 103

1.m Long

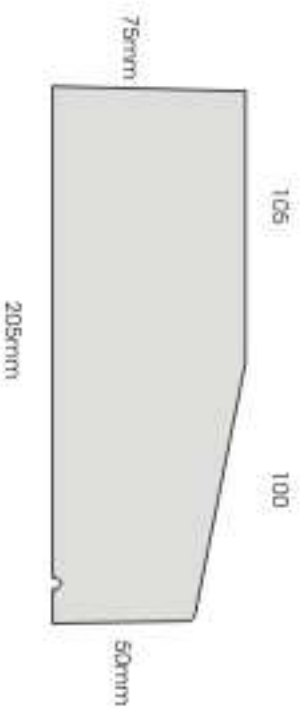


decon Coping Type 0111

1m long

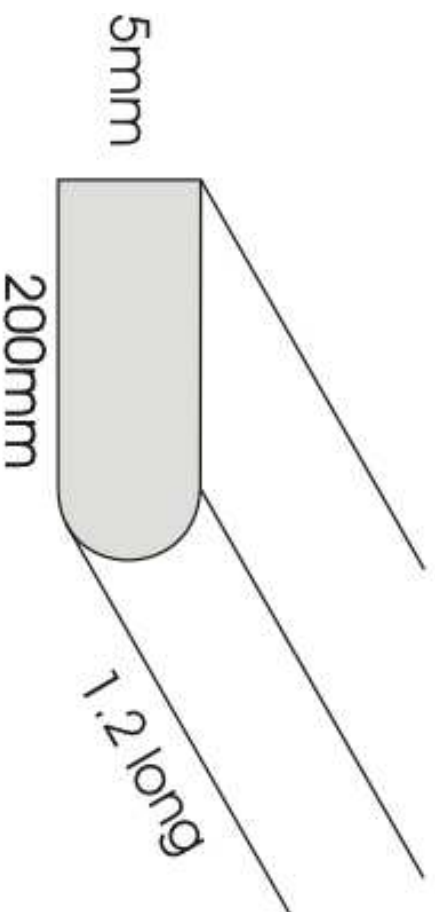


decon Coping Type 0110

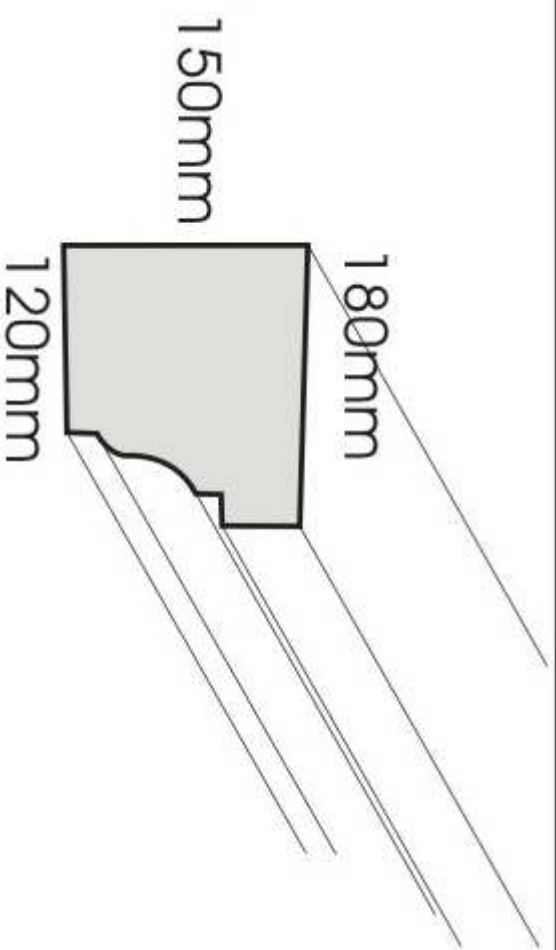


decon Coping Type 0114


1m long

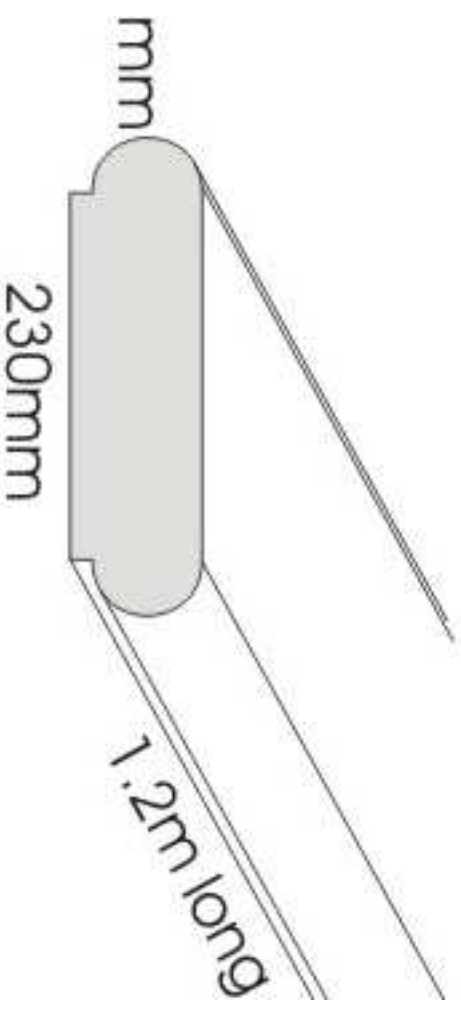


decon Coping Type 113

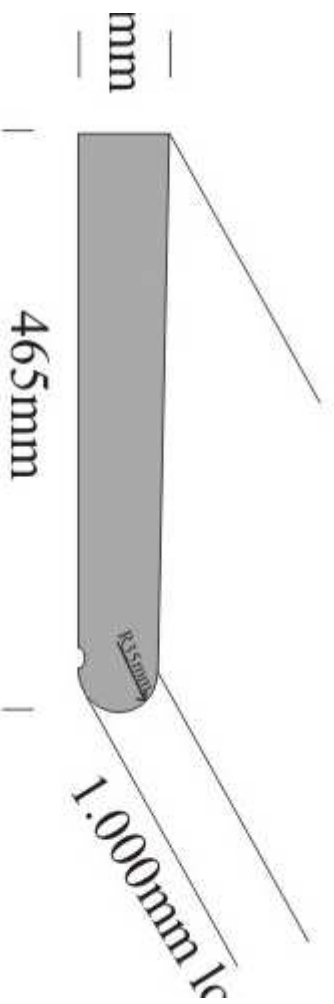


dcon Coping Type 117

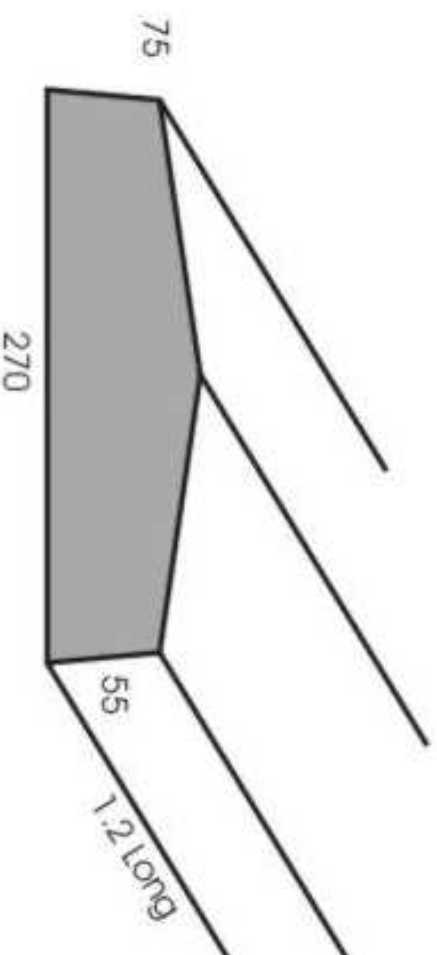

dcon Coping Type 121

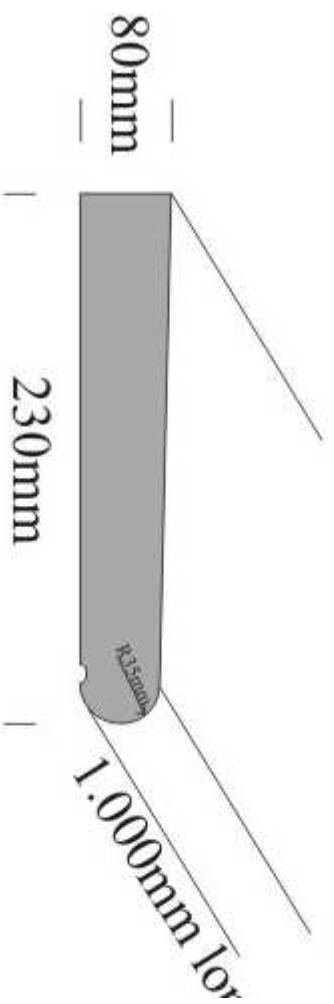

dcon Coping Type 116

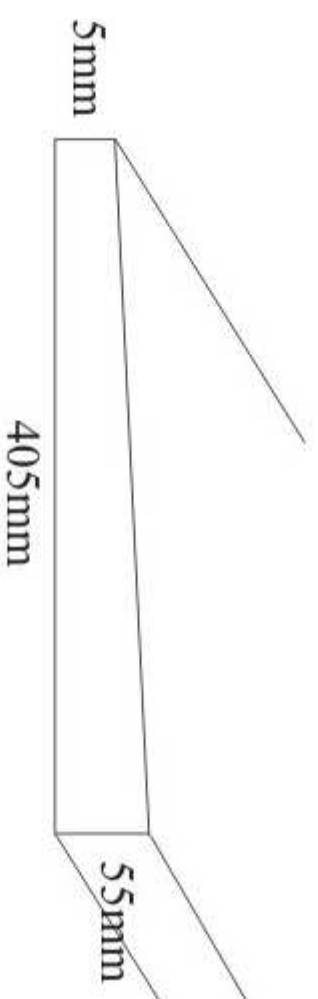

dcon Coping Type 120

380

420

270

10

455

270

420

415

10

455